## harmonizedhome

# **MEDICINE CABINET**

MC-1 11/24



### SAFETY PRECAUTIONS:

- 1. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
- 2. ENSURE THE SCREWS AND WALL PLUGS ARE SUITABLE FOR THE WALL INTENDED TO MOUNT THIS PRODUCT. CONSULT THE QUALIFIED PERSON FOR SAFETY INSTALLATION.
- 3. CONNECT THE GROUND WIRE (BARE COPPER OR GREEN) FROM YOUR FIXTURE TO THE GROUND WIRE (BARE COPPER OR GREEN) OR GROUND SCREW IN THE ELECTRICAL BOX.
- 4. CLEAN GLASS WITH WATER ONLY.
- 5. FOR HOUSEHOLD USE ONLY.
- 6. WARNING RISK OF TIP OVER. MAX. 12 LB LOAD.
- **DANGER** TO REDUCE THE RISK OF ELECTRIC SHOCK:
- 7. TURN OFF ELECTRICAL POWER BEFORE STARTING INSTALLATION OF THIS FIXTURE.
- 8. WIRING SUPPLIES AS REQUIRED BY LOCAL ELECTRICAL CODE (NOT SUPPLIED).
- 9. TO CLEAN THE MEDICINE CABINET, TURN OFF THE POWER, WAIT FOR IT TO COOL. WIPE THE MIRROR WITH A CLEAN AND SOFT CLOTH.


**WARNING** - TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS:


- UNPLUG FROM OUTLET BEFORE PUTTING ON OR TAKING OFF PARTS.
  USE THIS FURNISHING ONLY FOR ITS INTENDED USE AS DESCRIBED IN THESE INSTRUCTIONS. DO NOT USE ATTACHMENTS NOT RECOMMENDED BY THE MANUFACTURER.
- 12. NEVER OPERATE THIS FURNISHING IF IT HAS A DAMAGED CORD OR PLUG, IF IT IS NOT WORKING PROPERLY, IF IT HAS BEEN DROPPED OR DAMAGED, OR DROPPED INTO WATER. RETURN THE FURNISHING TO A SERVICE CENTER FOR EXAMINATION AND REPAIR.
- 13. DO NOT USE OUTDOORS.
- 14. FOR LOADING ALWAYS PUT HEAVIER ITEMS AT THE BOTTOM AND NOT NEAR THE TOP IN ORDER TO HELP PREVENT THE POSSIBILITY OF THE FURNISHING TIPPING OVER.
- 15. EACH SURFACE INTENDED TO SUPPORT A LOAD SHALL HAVE A CORRESPONDING STATEMENT IN THE USE INSTRUCTIONS SPECIFYING THE MAXIMUM INTENDED LOAD FOR THAT SURFACE IN POUNDS (KILOGRAMS).

16. REQUIRE AT LEAST 2 PERSONS TO SAFELY INSTALL THIS PRODUCT.

NOTE: Product may not look exactly as shown in figures.

### **INSTALLATION:**

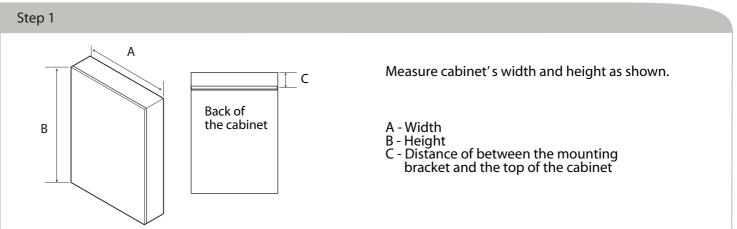


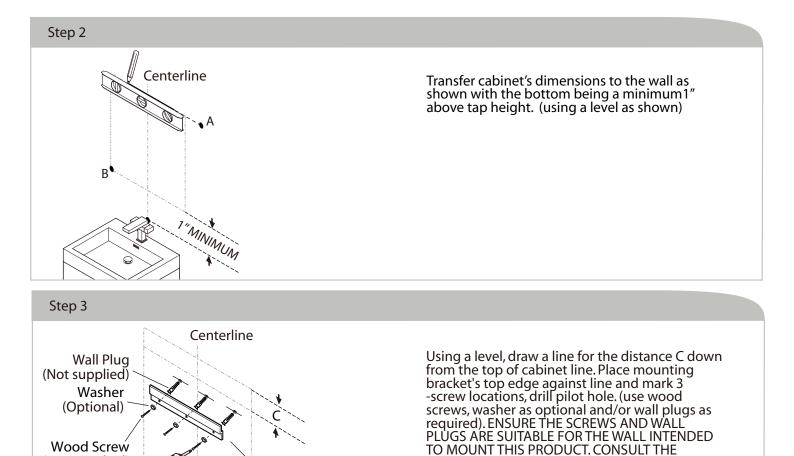

Mounting Bracket

#### Step 4

(Not supplied)

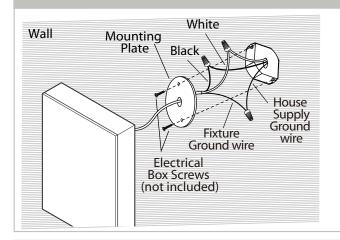

Run the fixture supply wire through the middle hole of round mounting plate. Then make the electrical connection from the cabinet to the house supply wires.


QUALIFIED PERSON FOR SAFETY INSTALLATION.


Connect the ground wires (bare copper or green) from your fixture to the ground wire (bare copper or green) or ground screw in the electrical box. Connect the black wire from the fixture to the black wire in the electrical box and connect the white wire to the white wire in the electrical box.

Once connections of wires are completed, carefully tuck wires and wire nuts into the electrical box making sure no bare wire (on the black and white) is visible at the wire nuts.

Secure the round mounting plate to electrical box using electrical box screws (not supplied).




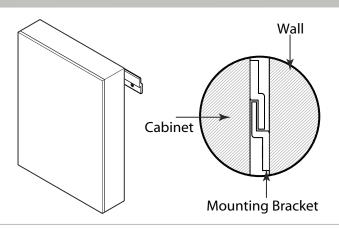

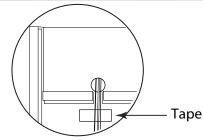

If the bracket is below the wiring hole. Tape the wire so that it won't come out from the mounting bracket.

Hang the cabinet on the mounting bracket.

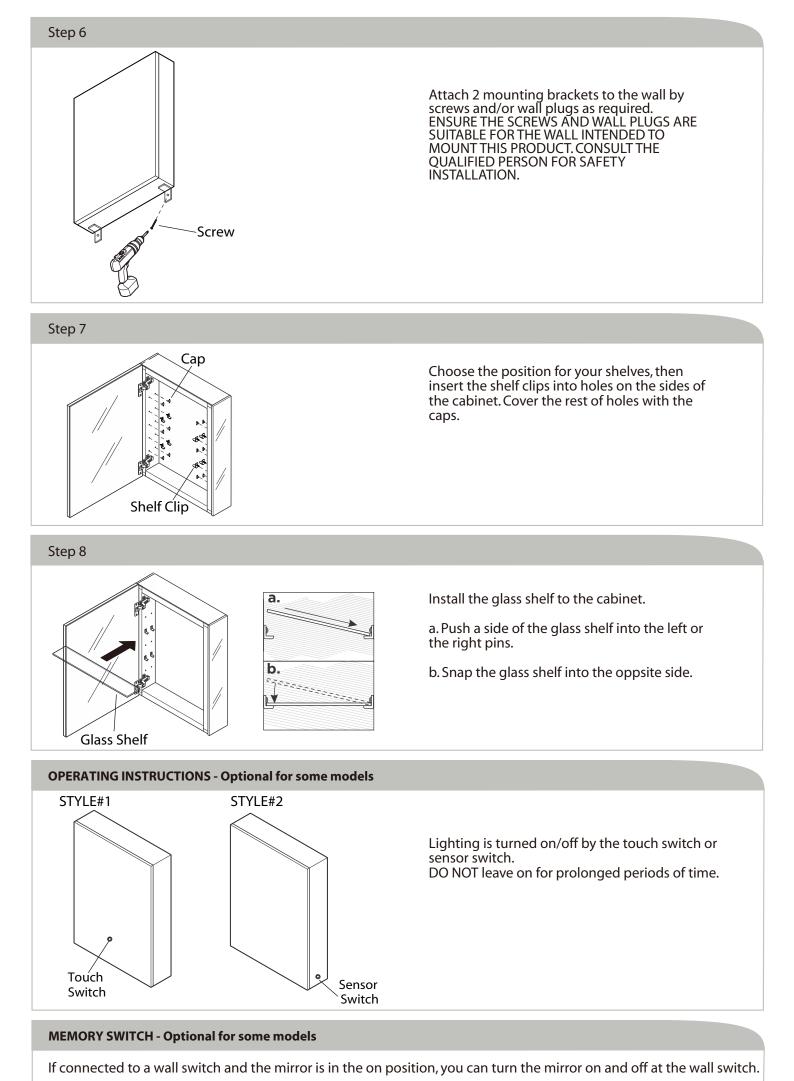

Tel: (613) 342-5424, Fax: (800) 263-4598 3-3